



Basic Operating Instructions

Extra Fob

This document contains the instructions for Extra fobs to be used with DG1 Unit

INFORMATION YOU MUST TAKE HEED OF

- YOU WILL NEED TO TUNE IN THE FOB

WHAT YOUR DELIVERY CONTAINS AND WHERE TO LOOK FOR WHAT

1 fob

ASSISTANCE – In the event that you need assistance during installation or after please refer to the manufacture website under 'other info' www.dofygate.co.uk or use the contact numbers on the website if you require further help.

Contents

These are the Original Instructions for Dofygate DG1 Unit intended for use in retaining stock within a stock yard or within field. Or controlling traffic entering a property.

Table of contents

1.0 Assistance

3.0 Setting up Instructions

1.0 Assistance Information

Sales 01522 500600

Technical help 01603 493102

Out of hours help 07785 352730

E Mail admin@dofygate.co.uk

For operational information including tuning in fobs or pairing gates then please try our web page www.dofygate.co.uk and go to 'useful information' tab.

Dofygate Ltd is located at Manor Farm,
Calthorpe,
Norwich.
NR11 7QR

Maintenance

The fob contains a battery which should last several years of normal use. To replace split the fob and change the cell battery with a CR2032 battery.

3.0 Setting up instructions – Fixing heights

The fob has 4 buttons which work as 2 pairs marked Orange and Green allowing any fob to open two gates independently within close proximity or more if separated by more than 150 metres.

The top button of each pair – Orange 1 can open one gate and the Green 2 can open another gate. The bottom button of each pair Orange 3 and Green 4 closes the respective gates.

When tuning you only press the open button which automatically tunes in the close button. It is recommended that you keep consistency in that

Tuning in procedure

1. Have the fob to hand before starting
2. Open the cabinet using the key provided with the gate
3. Turn the gate(s) off and wait 10 seconds.
4. While holding down the cabinet mounted 'operate' button, switch the gate on with the internal toggle switch.
5. Keep the cabinet mounted 'operate' button pressed for 5 seconds.
6. Release the cabinet mounted 'operate' button.
7. On your fob press either orange (1) button or Green (2) button depending which one you want to open the gate
8. The LED in the cabinet flashes quickly
9. Press the same (orange no 1) fob button again.
10. Press the cabinet mounted 'operate' button to complete and lock in the fobs.
11. Press the cabinet mounted 'operate' button a second time to complete
12. Check the fob is tuned in by operating the gate with fob.
13. Turn this unit off
14. Repeat this procedure with the other gate unit.
15. If tuning in multiple fobs carry out steps 7 – 9 with each fob in turn and lock in with steps 10 – 11

