



[www.dofygate.co.uk](http://www.dofygate.co.uk)

Dofygate Ltd NR11 7QR

[jim@dofygate.co.uk](mailto:jim@dofygate.co.uk)

01263 493102



Yours sincerely,

A handwritten signature in black ink, appearing to read "Jim Alston".

Jim Alston

**DOFYGATE LTD, Manor Farm  
Calthorpe, Norwich. NR11 7QR**

**Telephone:01263 493102  
[jim@dofygate.co.uk](mailto:jim@dofygate.co.uk)**

**Company No 08131835  
VAT no 139 1854 93**


## 5.8 Clock - Timed open/close –

If the screen is blank press (**LIGHTLY** with pen or small screwdriver) the **RESET** button which will activate the screen. The clock has its own rechargeable battery which can run down if the gate is turned off for any length of time. If this happens the clock will need to be reset.

**BE AWARE** - BEFORE THE CLOCK WILL RESPOND TO ANY BUTTON YOU MUST FIRST PRESS **THE C/R** BUTTON 4 TIMES.

**BE AWARE** – THE SMALL ARROW AT THE BOTTOM OF THE DISPLAY SHOULD BE IN THE CENTRE (AUTO) POSITION FOR THE TIMER TO OPERATE. THE ARROW IS MOVED USING THE **MANUAL** BUTTON (TOP RIGHT)

When the timer is off the **LED** is NOT lit and the gate is down and will respond to remote controls and the button.

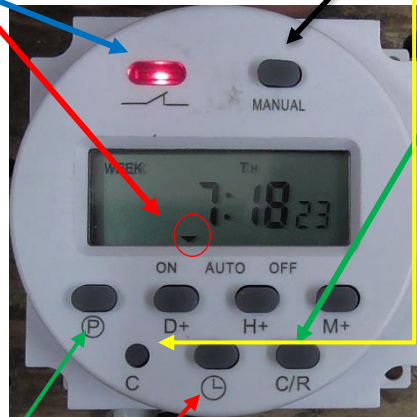

When the timer is on the LED IS lit red the gate is up and asleep.

When the gate is in the timed up position it will not respond to the fob or button. This state can only be overridden by manually putting the clock in the off position.

### To manually override clock

Press the C/R button 4 times and then press the manual button (top right) until the red LED on the timer goes out and the indicator arrow is over either On for open or off for close. When in either the clock will not govern open and close time but it will remain in the state set. To re-activate timer ensure the arrow at the bottom of the screen is in the auto position.

### To set the correct time

Press the C/R button 4 times

Press the clock button and use the day, hour and minute buttons to set the time.

### To set a program

Press the 'P' button (left of middle row) and use the day, hour and minute buttons to set the start of the first 'off' (gate down) period = 1. To end the gate down period and start the gate up period press the 'P' button again and set the start of the on (gate up) period = 2. If you do not press any other buttons then this will give you a single up period and a single down period every 24 hours 7 days a week.

To end programming press the clock button.

### Other time periods

Can be programmed including weekends by using the 'day' button and creating another program to run alongside the first. There are 20 program slots.

Each programmed time has a number. Odd numbers are the start of the 'off' (gate down) period and even numbers are the start of the 'on' (gate up) period. There are 20 available period changes.