



Repacking pallet – please read this before sending barrier back


Remove barrier from stand and place so the barrier sits on the pallet with the spigot at the bottom of the barrier unit sits in the short tube on the front leg of the frame.

2 stands and 2 barriers per pallet which can be a standard 1.2 * 1.0 pallet.

The pallet should look like this – do not lie barriers down or leave the barrier bolted to the stand.

Once in place strap stand to pallet over weights and then barrier to stand.

If you do not have the clear plastic covers put a layer of protection between stand and barrier

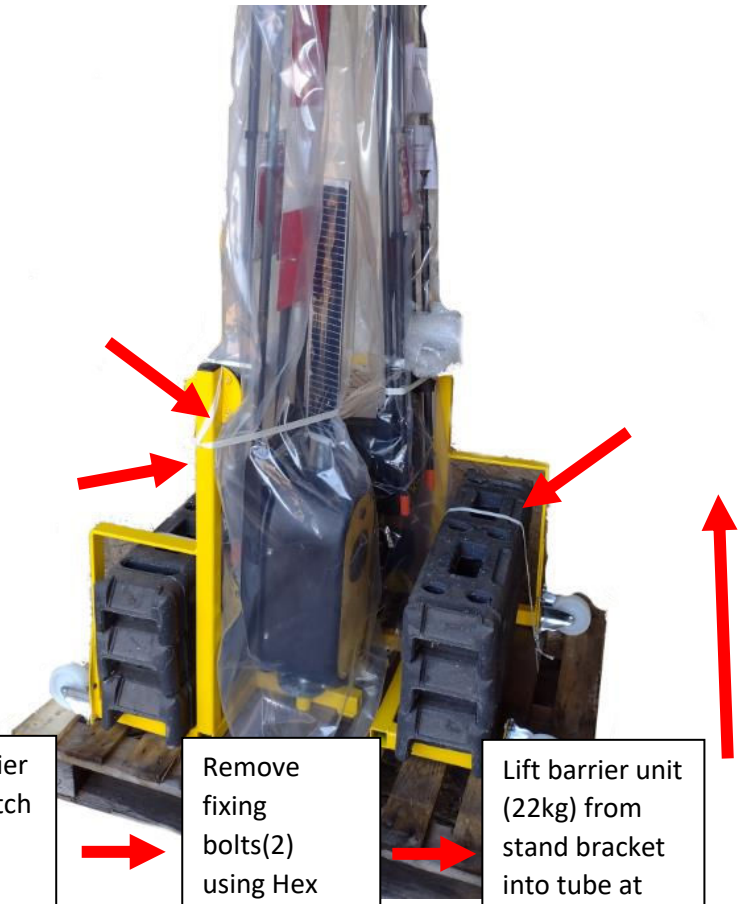


Open cabinet with key on lanyard in maintenance pack

Turn barrier off at switch above battery

Remove fixing bolts(2) using Hex key inside cabinet door

Lift barrier unit (22kg) from stand bracket into tube at stand base

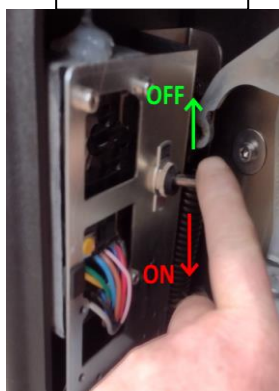

When pallet is ready please call 01263 493102 or leave a text with 07785 352730 or email jim@dofygate.co.uk

Do not forget maintenance pack and transmitters – Thank for your assistance