

Pairing procedure

Open the cabinet using the key provided with the gate and locate the 'operate'. Pressing the 'operate' button either opens or closes the gate. Have the fob(s) to hand before starting

1. Turn the gate(s) off
2. While holding down the 'operate' button, switch the gate on with the internal toggle switch.
3. Release the 'operate' button. **(LED flashes slowly)**
4. On your fob press the colour of button you wish to work the barrier or on a fixed radio button press either button. **(LED flashes quickly indicating transmitter signal recognised and ready to be stored)**
5. If you have multiple transmitters to pair then you can pair another when LED is flashing slowly again. LED flashes quickly again telling you the transmitter is recognised then slowly and ready for another.
6. Wait until LED flashes slowly then press the 'operate' button to store and lock in the transmitter(s) signal.
7. Check successful operation by operating barrier with each transmitter.
8. If a synchronized pair units are involved then turn this unit off and repeat procedure on the other.

